


5. Electrical wiring

NOTE:

1. THE PARTS WITH DOTTED LINE INDICATE OPTIONAL FEATURES.
2. REMOVE THE SHORT CONNECTOR OF jr1 WHEN YOU USE THE ON/OFF FUNCTION.
3. REMOVE THE SHORT CONNECTOR OF J1 WHEN YOU USE THE "WATER LEVEL SWITCH" FUNCTION.

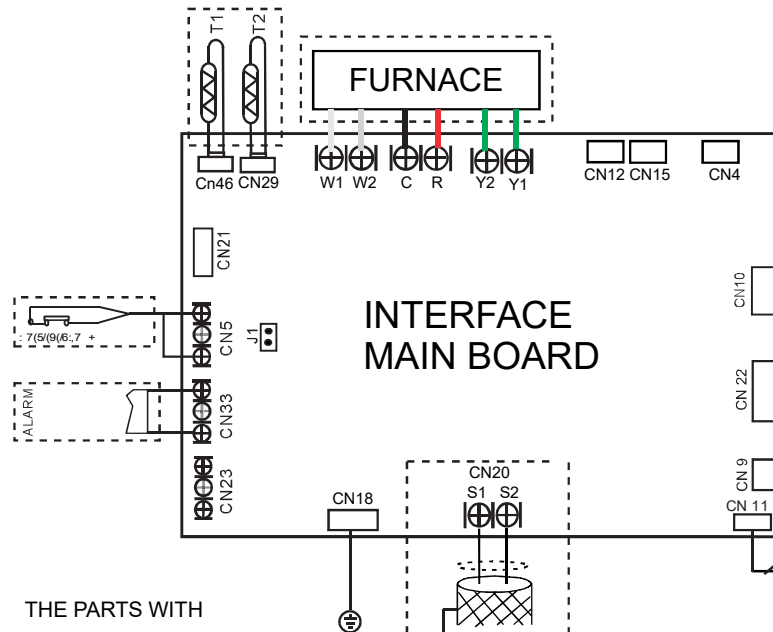

NOTE:

1. THE PARTS WITH DOTTED LINE INDICATE OPTIONAL FEATURES.
2. REMOVE THE SHORT CONNECTOR OF jr1 WHEN YOU USE THE ON/OFF FUNCTION.
3. REMOVE THE SHORT CONNECTOR OF J1 WHEN YOU USE THE "WATER LEVEL SWITCH" FUNCTION.

UNUSED	
ENC1	
CODE	
DEFAULT	✓

24V THERMOSTATS SETTING						
CODE	0~F	ON=OFF	ON=OFF	ON=OFF	8186	ON=OFF
DEFAULT	✓	✓	✓	✓	✓	✓

UNUSED				
S1+S2				
CODE	0~F	0~F	0~F	0~F
ADDRESS	0~15	16~31	32~47	48~63
FACTORY SETTING	✓			

